

Escooterfix - Replace front LED lamp Xiaomi Mi electric scooter

Here we will walk you through the steps to replace the headlight on your Xiaomi Mi electric scooter

 Difficulté Facile

 Durée 20 minute(s)

 Catégories Électronique

 Coût 8.90 EUR (€)

Sommaire

Étape 1 - Removing the dashboard and display

Étape 2 - Unscrew the 3 screws

Étape 3 - Disconnect the cables

Étape 4 - Unplug the controller board

Étape 5 - Remove the headlight

Commentaires

Matériaux

Outils

Étape 1 - Removing the dashboard and display



Using your nails or a plastic spudger, carefully lift the two plastic covers from the top of the stem. They are held on with foam tape so a hairdryer on a cool setting can warm the adhesive and aide the release if you are having difficulty.






Étape 2 - Unscrew the 3 screws

With the scooter powered down, unscrew the three small cross-head screws securing the control board and carefully lift it up and out.

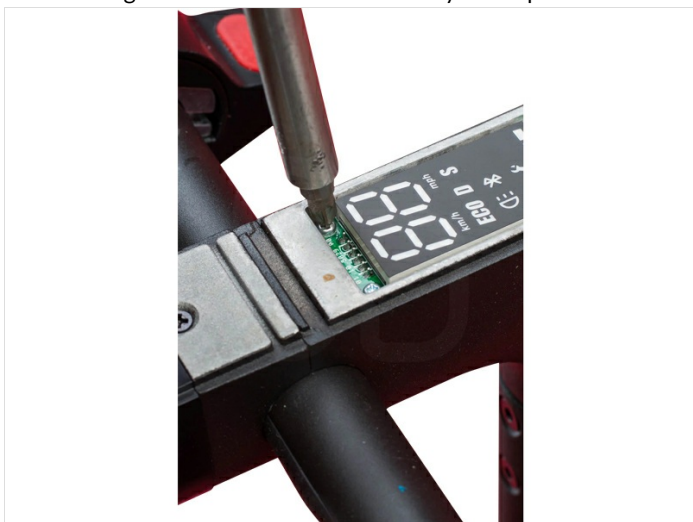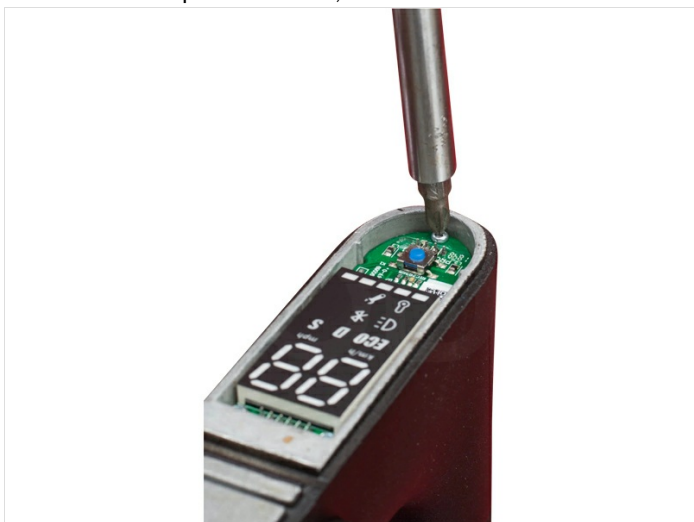


Étape 3 - Disconnect the cables

Release the cable-tie and pop off the rubber thimble to expose the three control connectors and carefully unplug these. The black/blue/red connector is for the brake lever, yellow/white the headlight and the red/green/black is for the throttle.

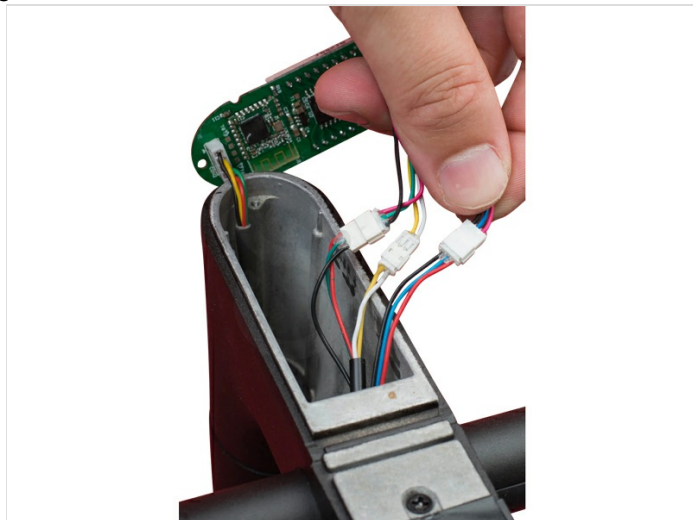

Étape 4 - Unplug the controller board

Carefully pull the grey cable up from the tube to fish out the black connector and unplug it to release the controller board. If you are having trouble pulling the cable up, back off the four bolts that hold the handlebars to the upright tube as it can often get caught by them.

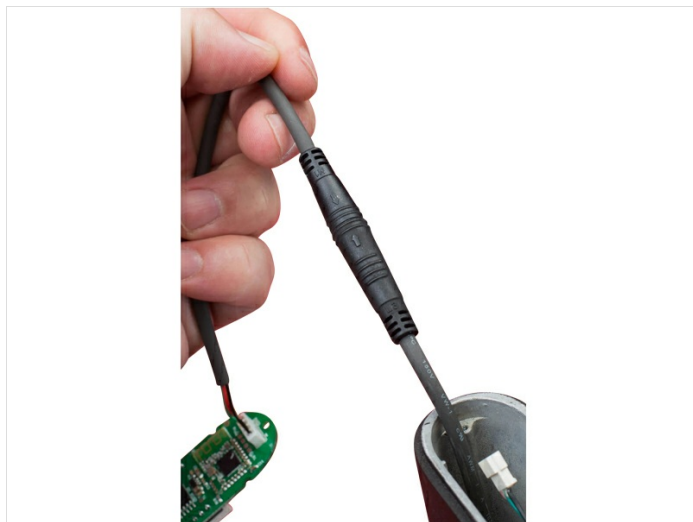

Étape 5 - Remove the headlight

The headlight unit is held to the front of the scooter with **two small cross head screws**, one on-top and one below. Removing them both will allow you to pop it from the front, pulling the cable through the resulting hole.

